LED WIRELESS MINI TOWER SPEAKER

USER MANUAL

811310

1. COMPONENTS INCLUDED

Mini Speaker - USB power supply cable &3.5mm audio cable -Remote control

2. OPERATION GUIDE

- Activate Bluetooth mode：Turn on the speaker, you will hear a sound that indicates"Bluetooth mode"; find in your device the signal "BT-SPEAKER" and pair it with your device. A sound will indicate that the connection is successful (Speaker without Bluetooth no this function).

- Activate Line In mode: Turn on the speaker, press "MODE" button until you hear "Audio Input" ;plug the 3.5mm audio cable into the Line In port on the speaker and into your device [Compatible with MP3, MP4, computers, mobile phones and other multimedia equipments].

- Activate MP3 player mode：Turn on the speaker and insert a USB or SD card, the speaker will automatically start playing MP3 format files.

- Activate FM Radio：Turn on the speaker, press "MODE" button until you hear "Radio Mode" and it will enter FM radio. Press ▶/II key to enter into automatically search and store channels; press I◀/V- key to choose the previous channel or ▶I/V+ key for the next channel.

- MODE key: press this key in order to switch to different working modes [Bluetooth Mode, Radio FM Mode, Line In Mode].

- To navigate between your music, press I◀/V- key to choose the previous file and ▶I/V+ key for the next file. Press for a few seconds the I◀/V- key to decrease the sound level and press ▶I/V+ key to increase the sound. Press ▶/II key to play and pause your music.

- Charge Mode: Insert the power cable into the DC5V port and the USB side connects to a DC5V charger or computer.

3. SPECIFICATIONS

- Bluetooth : Compatible Bluetooth 2.0/3.0 (Speaker without Bluetooth no this function)
- Output voltage：DC 3.3-3.7V
- Input voltage：DC 4.2-5.0V
- Power supplier: power adapter 5.0V OR computer by USB cable

4. REMOTE CONTROL

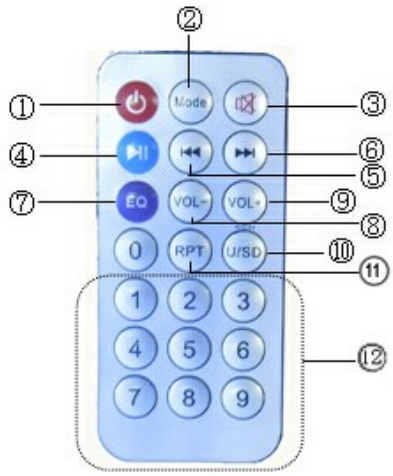

① **:** power on/off
② : mode change of radio, SD card, USB, audio input, Bluetooth
③ : Mute
④ : pause/play, automatically search and store channels under FM radio
⑤ : previous file, previous channel under FM radio
⑥ : next file, next channel under FM radio
⑦ : 7 kinds of sound-effects switch
⑧ : decrease volume
⑨ : increase volume
⑩ : USB,SD card switch
⑪ : Loop choosing
⑫ : song file choosing

5. SAFETY CAUTIONS

- Keep out of reach of children; in order to avoid electrical shocks or suffocation.
- Do not spill any liquid on the product and do not touch with wet hands to avoid getting shocked.
- Do not disassemble, try to repair or reconstruct the product.
- Do not place a flame source such as candles close or on top of the speaker.
- Do not locate the speaker or cord near heat sources such as radiators, heaters, air duct or direct sunlight.
- Stop using the speaker in the following situations: high temperatures, smoke, burning smell, unusual noise or if you notice fire coming from product.

MADE IN RPC

© 2015 TEKNOFUN ALL RIGHTS RESERVED

© 2015 MADCOW ENTERTAINMENT FRANCE ALL RIGHTS RESERVED

WWW.TEKNOFUN-ENTERTAINMENT.COM

www.mia-and-me.com

© 2015 Hahn & m4e Productions, Rainbow, March Entertainment